

## How to Reset Service Indicator of BMW 3 E46 Chassis

Launch Software BMW Engineer  
Li Youxing

With the enhancement of service consciousness of vehicle, service light reset is becoming a technology target for weighing vehicle maintain and service. So we launch X431 technology center will provide technology instructor articles. Now how to reset service light of E46 chassis for BMW 3 series will be discussed.

### When need reset?

Turn key switch ON or when start engine, the instrument panel will display “OIL Service” or “INSPECTION” and left distance for several seconds. If “Service” or “INSPECTION” are lit all the time and the left distance is next to “0”, it indicates that it needs oil service reset.

### How to reset by manual?

- 1、 Press RESET button in the left of instrument panel, See fig.1.
- 2、 Turn key ON and to ACC position.
- 3、 Waiting for the instrument displays “OIL Service” or “INSPECTION” is flashed.
- 4、 Release RESET button, then press five seconds, the screen will display RESR or RE is flashed. Release RESET button again and press again till the screen displays “25000km”. Now reset is completed.

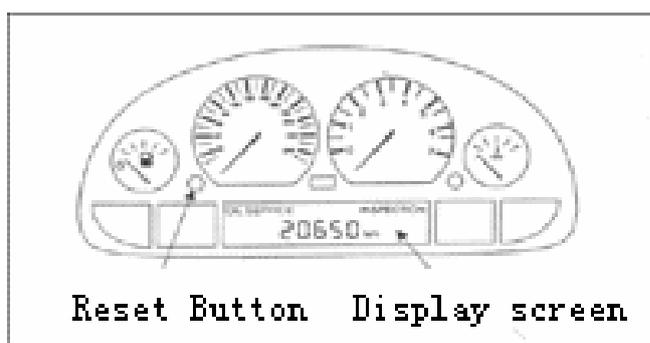


图 1.

### Why fail to reset by manual?

When you find there is “-“symbol in front of the left distance number in the screen, and you can’t do reset with the above method, now you can use X-431 to reset oil service.

### How to reset by X-431?

Firstly, please download the latest software in [www.x431.com](http://www.x431.com);

Secondly, please do reset as following:

3 series → 3'\_E46 → Instrument system (KOM) → service reset → oil service, time inspection, distance inspection → reset succeed.

SELECT CAR SERIES			
1 Series			
3 Series			
5 Series			
6 Series			
7 Series			
8 Series			
X Series			
Z Series			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			00:54

图 2.

SELECT CAR CHASSIS			
3'/Z1_E30			
3'/Z3_E36			
3'_E46			
3'_E90/E91			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			01:07

图 3.

SELECT DIAG. SYSTEM			
DME (Engine)			
EGS (Transmission)			
ABS (Antilock brake)			
SRS (Air bag)			
IHKA/IHKB (AC/heater)			
IKE/IKI/KOMBI			
EWS (Elec. immobilize system)			
ZKE (Central body electronic)			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			01:10

图 4.

SELECT DIAG. FUNCTION			
Read fault memory			
Clear fault memory			
Component activation			
Service Reset			
Identification			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start			01:10

图 5.

ACTIVATION TEST			
Oil service			
Time inspection			
Distance inspection			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start	☐	☑	☼ 01:11

图 6.

ACTIVATION TEST			
End of the resetting of the instrument panel.			
OK			
Start	☐	☑	☼ 01:12

图 7.

If any other questions, please send the ECU identification information to us (See fig.8&9), we will try our best to provide personal service.

SELECT DIAG. FUNCTION			
Read fault memory			
Clear fault memory			
Component activation			
Service Reset			
Identification			
PAGE UP		PAGE DOWN	
HOME	BACK	PRINT	HELP
Start	☐	☑	☼ 01:12

图 8.

ECU IDENTIFY	
ROM Instrument cluster	
Part Number	6906884
Hardware NO.	09
Software NO.	16
Diagnosis index	52
Coding index	04
Bus index	10
Data	50/99
CAN index	04
Modification	44
OK	PRINT
Start	☐
☑	☼ 01:12

图 9.